




CD/DVD Player

Ръководство за стартиране / Alustusjuhend / Vodič za početak / Pasirengimo darbu vadovas / Sākšanas norādījumi /
Oppstartsveiledning / Příručka pri spustení / Navodila za namestitev / Vodič za početak

1

A

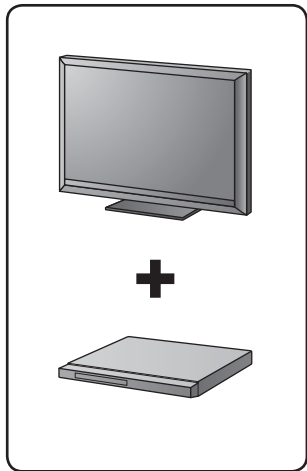


HDMI




VIDEO & AUDIO




B

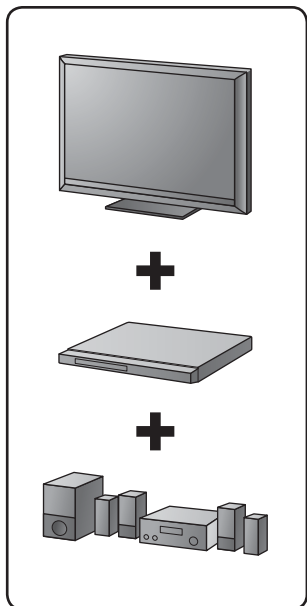

HDMI

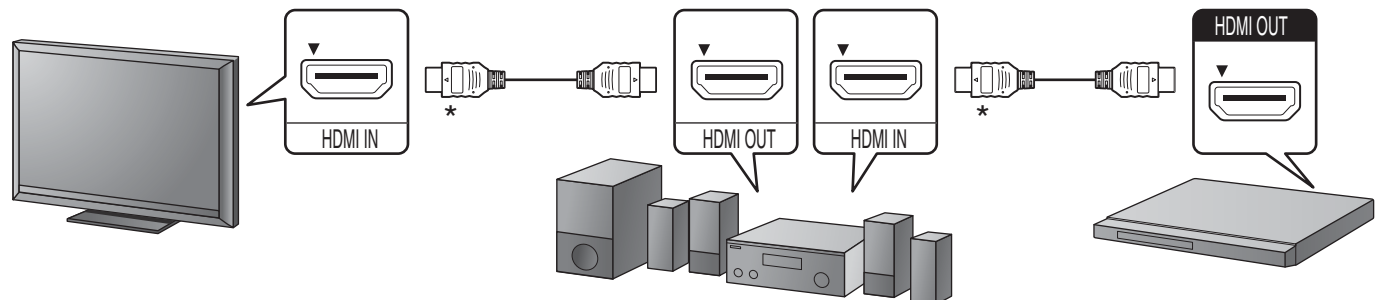


COAXIAL

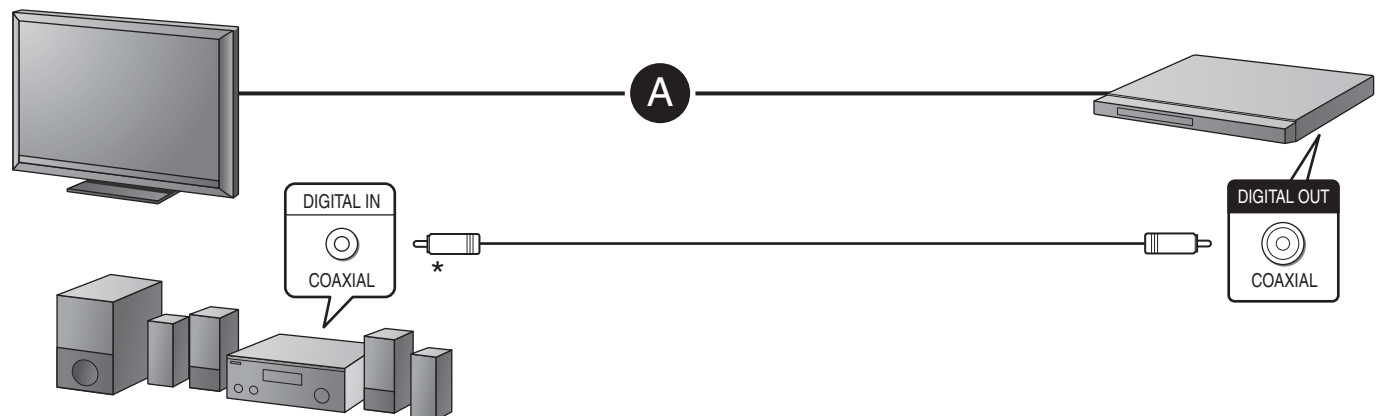


* Не е включено в комплекта / pole kaasas / Nije priloženo / Nepriedamas / Komplektācijā nav iekļauts / Medfølger ikke / Nedodáva sa /
ni priloženo / Ne isporučuje se

2



1

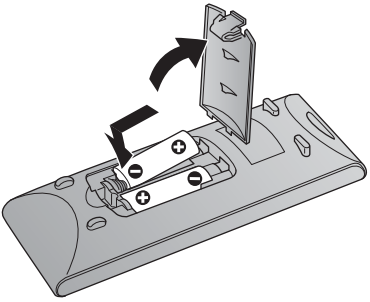

2

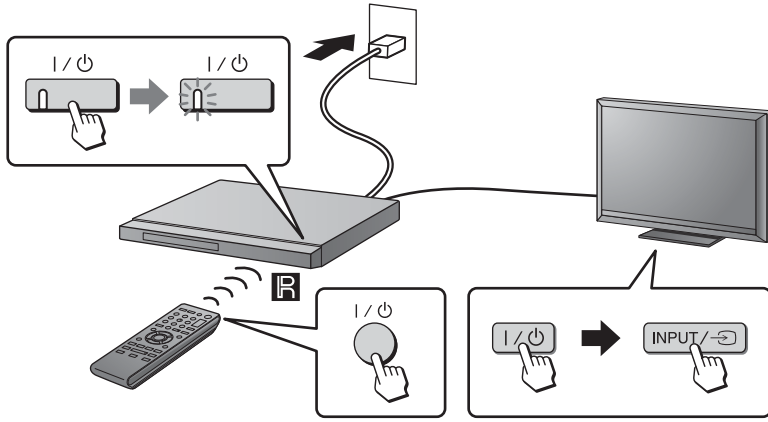


3

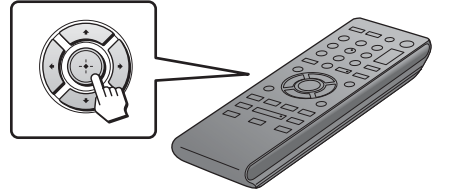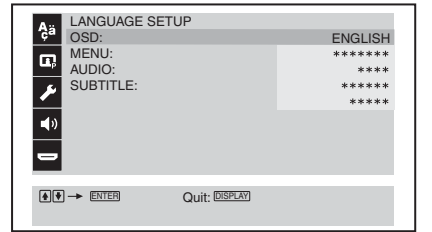

3

1

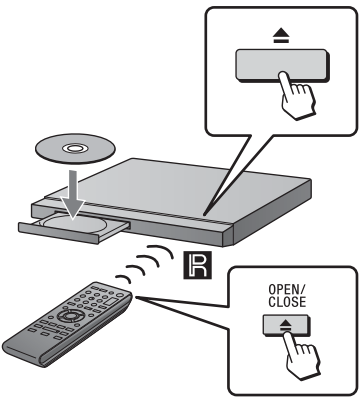

2

